arrows We

FCG01

Quick Start Guide

For disclaimers, refer to "Cautions on using the product". Descriptions in this manual are based on Android™ 11. Company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.

In this manual, "arrows We" is usually referred to as "the product" or "main unit".

In this manual, "microSD™ memory card (commercially available)", "microSDHC™ memory card (commercially available)" and "microSDXC™ memory card (commercially available)" are abbreviated as "microSD memory card" or "microSD".

For the latest edition, refer to "取扱説明書 (Instruction manual)" (Japanese) available on your carrier's homepage.

Mobile phone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the \mathscr{Q}) logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.







Manufactured by: FCNT LIMITED

CA92005-0634 December 2021, 1st edition

18)


Mandiactured by: I CIVI LIMITED

® 5G/4G antenna

area*2

(a) Back camera
Peel off the
transparent protection
film attached to the
camera at the
purchase before use.
(b) 20 mark

 - (§ 5G/4G/GPS/Wi-Fi[®]/Bluetooth[®] antenna area*²
- (7) Flash/Light
- ® Fingerprint sensor*3
- (9) microSD memory card/SIM card slot*4*5



arrows


*1 Note that covering these parts with a protection sheet, stickers, or fingers, etc. may hinder product performance.

- *2 The antenna is built into the main unit. Covering around the antenna by your hand may affect the quality of call/communication.
- *3 Do not attach a protection sheet or stickers, etc. on the sensors. *4 Install/remove after turning off the power. To avoid
- water or dust infiltration, be sure to close firmly.

 *5 A nameplate is inside and a sticker bearing the IMEI information, etc. is attached. Please do not peel off the sticker or remove the nameplate.
- The back cover is not removable. Removing forcibly might cause damage or a malfunction. Also, battery is built into the main unit and not removable by customers.

Names and functions of parts

- ① Stereo earphones port
- ② Second-mic*1
- 3 Earpiece*1
- 4 Front camera5 Light/Proximity
- sensor*1
- ® Display (touch panel)
- ① Mic/Recorder mic*
- ® USB Type-C™ port
 (9) Speaker*1
- 10 Power kev
- 1 Volume up key
- 12 Volume down key

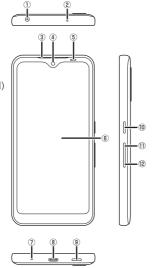


2



SIM card

 
Your phone number etc. is recorded in SIM card. SIM lock is disabled for the product.



Attaching SIM card

Before attaching SIM card, make sure to turn off the product.

1 Face the display side of the product up, put your fingertip into the groove, and then draw the slot cap of the microSD memory card/SIM card slot straight and horizontally

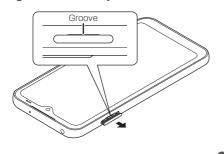

Turning the power on/off

- Turning the power on
- 1 Press and hold Power key (over 2 sec.)

 
The lock screen appears.

When the initial setting screen appears after the product is powered on, follow the onscreen instructions to set the initial settings.

- Turning the power off
- 1 Press and hold Power key (over 1 sec.)
- 2 [Power off] → [OK]
- Forcedly turning the power off
- 1 Press and hold Power key and the volume up key at the same time for eight seconds or more, and release your fingers after the screen turns off


2 Set SIM card into the tray (for SIM card) with the IC (metal) part facing down

Pay attention to the location of the notch. Surely set SIM card into the tray not to come off.



- 3 Check that the display side of the product faces up, and then insert the tray straight and horizontally
- 4 Firmly press the slot cap to close

Pay attention to the direction the tray is being pushed in. Firmly press where circled \bigcirc , and check that there is no gap between the main unit and the slot cap.

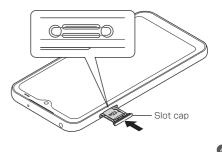

Packaged items

Before you start using the product, make sure that you have all these packaged items with the product.

· Main unit



- クイックスタートガイド (Quick Start Guide) (Japanese)
- ご利用にあたっての注意事項 (Cautions on using the product) (Japanese)

These items are not included in the package.

- microSD memory card
 Earphones
- AC adapter
 USB Type-C cable

memo

- Purchase a specified charger (sold separately).
- . The battery is built into the product.
- Illustrations used in this manual are just images for explanations. They may be different from actual ones.